


# PMFL, size 80-4

Overhaul kit | Code number 027F0633

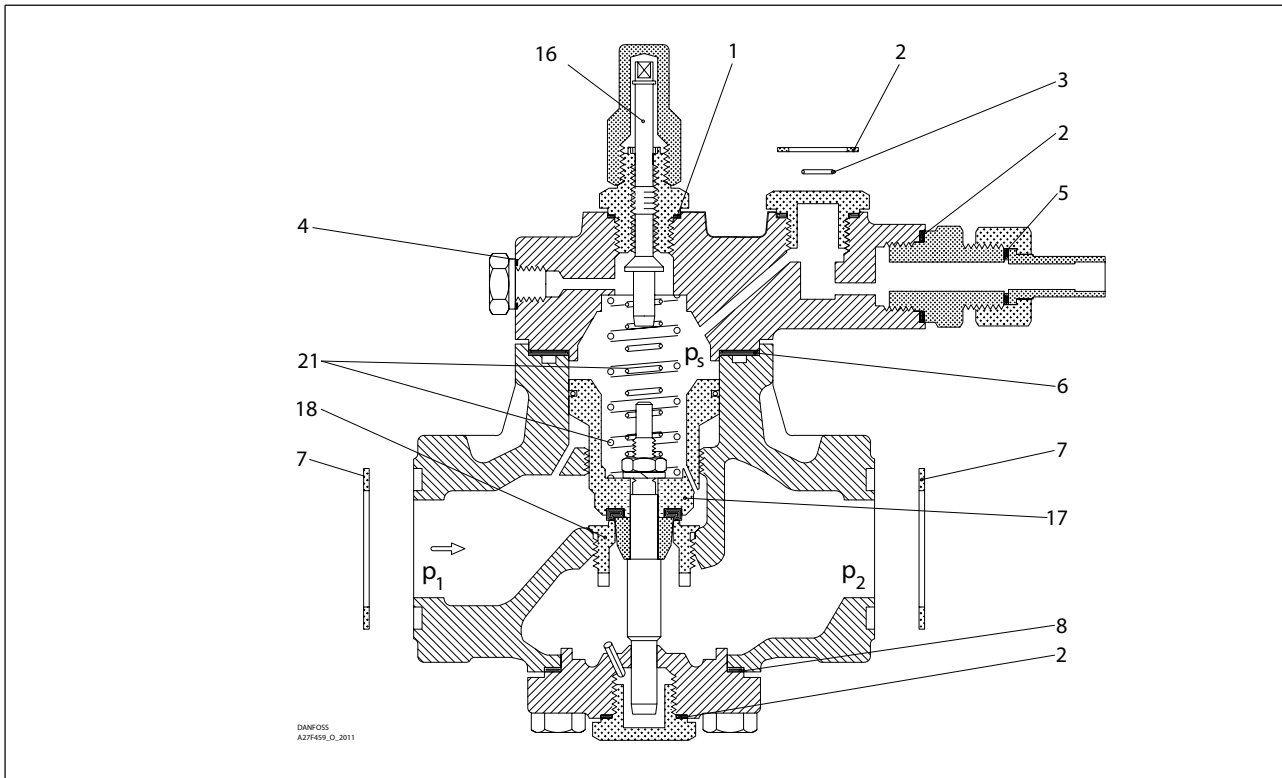

<p><b>1</b></p> <p> = Alu.</p> <p><math>\varnothing 26 \text{ mm}</math> <math>\varnothing 1.02''</math></p> <p>Total no. = 1</p>	<p><b>2</b></p> <p> = Fibre</p> <p><math>\varnothing 33 \text{ mm}</math> <math>\varnothing 1.28''</math></p> <p>Total no. = 4</p>	<p><b>3</b></p> <p> = Alu.</p> <p><math>\varnothing 9 \text{ mm}</math> <math>\varnothing 0.36''</math></p> <p>Total no. = 3</p>	<p><b>4</b></p> <p> = Alu.</p> <p><math>\varnothing 18 \text{ mm}</math> <math>\varnothing 0.70''</math></p> <p>Total no. = 1</p>	<p><b>5</b></p> <p> = Alu.</p> <p><math>\varnothing 14 \text{ mm}</math> <math>\varnothing 0.55''</math></p> <p>Total no. = 1</p>	<p><b>6</b></p> <p> = Fibre</p> <p><math>\varnothing 75 \text{ mm}</math> <math>\varnothing 2.95''</math></p> <p>Total no. = 1</p>
<p><b>7</b></p> <p> = Fibre</p> <p><math>\varnothing 39 \text{ mm}</math> <math>\varnothing 1.54''</math></p> <p>Total no. = 2</p>	<p><b>8</b></p> <p> = Fibre</p> <p><math>\varnothing 60 \text{ mm}</math> <math>\varnothing 2.36''</math></p> <p>Total no. = 1</p>	<p><b>9*</b></p> <p> = Alu.</p> <p><math>\varnothing 32 \text{ mm}</math> <math>\varnothing 1.26''</math></p> <p>Total no. = 1</p>	<p><b>10*</b></p> <p> = Alu.</p> <p><math>\varnothing 22 \text{ mm}</math> <math>\varnothing 0.87''</math></p> <p>Total no. = 1</p>	<p><b>16</b></p> <p></p>	<p><b>17</b></p> <p><math>\varnothing 80 \text{ mm}</math> <math>\varnothing 3.15''</math></p> <p></p>
<p><b>18</b></p> <p><math>\varnothing 23 \text{ mm}</math> <math>\varnothing 0.91''</math></p> <p></p>	<p><b>21</b> Standard</p> <p><math>\varnothing 13 \text{ mm}</math> <math>\varnothing 0.51''</math></p> <p><math>\varnothing 25 \text{ mm}</math> <math>\varnothing 0.98''</math></p> <p></p> <p>1 set</p>	<p><b>21</b> Weak</p> <p><math>\varnothing 12 \text{ mm}</math> <math>\varnothing 0.45''</math></p> <p><math>\varnothing 25 \text{ mm}</math> <math>\varnothing 0.98''</math></p> <p></p> <p>1 set</p>	<p><b>21</b> Strong</p> <p><math>\varnothing 13 \text{ mm}</math> <math>\varnothing 0.52''</math></p> <p><math>\varnothing 25 \text{ mm}</math> <math>\varnothing 0.98''</math></p> <p></p> <p>1 set</p>		

\* The spare part is included in the package but is not used for PMFL size 80-4.